

MAG-POUCH

Adjustment Manual

Velcro:

Before attaching your Magazine Pouch to your belt place the extra strip of velcro on the back of the Mag-Pouch horizontally to increase adhesion to the belt (figure 0).



Figura 0



Figura 1

Adjusting the height in relation to the belt:

In order to adjust the charger dock's height in relation to the belt, you need to loosen the knurled disk (figure 1) and place the dock's handle (figure 2) in the desired position.



Figura 2



Figura 3

Mag-pouch on the belt:

In order to place the mag-pouch on the belt, you need to loosen the four screws on the handle. Before refastening them again, the optimal scenario is, in order to fasten the dock to the belt, that you have already placed the equipment in the correct place, in which you will use it. In order to loosen the screws, use the 3 mm Allen key. * Remember to keep the handle's opening upward.

Angular adjustment:

Still using the 3 mm Allen key, you can loosen the screws indicated by the red arrows in figure 3, to place the equipment in the desired angle. In order to make it easier, open the charger dock loosening the golden screws. See the figure below:



Figura 4

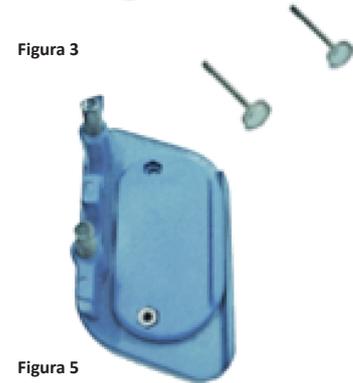


Figura 5

Adjusting the mag-pouch's width:

Adjusting the width is simple for bifilar chargers. All you need to do is fasten or loosen the golden screws. For monofilar chargers, you need to place the inserts that are supplied separately with the charger dock (figure 4). To do so, loosen the golden screws completely and place the inserts, one on each side. Then, put the extra nuts on the groove (figure 5) and fasten on the outer side of the mag-pouch, using the small extra screws.



Figura 6



Figura 7



Figura 8

In case you still need to reduce the mag-pouch's width, place the wedge (figure 6) close to the insert, according to figures 7 and 8:

How to change the mag-pouch from right to left-handed?

In order to reverse the mag-pouch, firstly completely loosen the screws indicated by red arrows in figure 3. Then, remove the Guga Ribas logo placed on the opposite side of the equipment, according to figure 9.

Then, all you need to do is reverse the side. Instead of the GR logo, place the silver part using the same screws that used to fasten it to the other side. See figure 10:



Figura 9



Figura 10

Position in relation to the waist:

You can also change the mag-pouch's position in relation to the waist. To do so, you need to make the same adjustment from the previous item (change it from right-handed to left-handed). However, instead of fastening the mag-pouch on the opposite side, place the silver part on the side. See figure 11:



Figura 11

GUGA RIBAS Co.

Rua dos Floricultores, 19- Guaratiba
Rio de Janeiro, RJ, 23032-270 Brasil

Tel: +55 21 2491-4513 | +55 21 2417-2768 | +55 21 2417-1571